



Connected RF Kit Supported Features

- Legend:
- Supported
 - ⚠ See Notes
 - ✗ Not Supported by Remote Starter
 - Not Supported by RF Kit

Revision Date: 11/30/2017

- Notes: (1): Must use a 10K resistor between the +12V and Blue data wire to create a pull up.
 (2): Blade-AL (64) MUST be used for full connectivity with remote starter functions.
 (3): Must use the HRN-CRF-01 or HRN-CRF-02 adapter harness included in the kit for connectivity
 (4): Function working but no melody feedback on 2way remote

Remote Starter Brand/Model	ADS				Compustar				Directed				Fortin		DSE
	HCx - VWx	ADS-AL-CA	AKX	BM - BZ	CM-6200	CM-7200	DC2	DC3	DBALL2	DB3	4X10 / 5X10	DS4 / DS4+	EVO-ALL	EVO-ONE	503-Air
Applicable Notes:	(4)	(1) (4)	(4)	(4)	(2)	(2)	(4)		(3)	(3)	(3)	(3)	(3) (4)	(4)	(4)
BASIC FUNCTIONS															
Communication Protocol Required	IDPP	RFP	IDPP	COM	DRONE	DRONE	DRONE	DRONE	SMARTSTART	SMARTSTART	SMARTSTART	SMARTSTART	Fortin 2	Fortin 2	DRONE
Remote Starter Firmware Version	RS Core 32671	V. 3.6	V. 3.6	-	RS V.7.15	RS V.3.25	-	-	-	-	-	-	-	RS: V1.23	V. r85
Antenna Mode learning	1x Flash	1x Flash	1x Flash	4x Flashes	3x Flashes	3x Flashes	3x Flashes	3x Flashes	2x Flashes	2x Flashes	2x Flashes	2x Flashes	4x Flashes	4x Flashes	3x Flashes
Transmitter Auto-learning mode	●	●	●	●	●	●	●	●	●	●	●	●	✗	✗	●
Transmitter Manual-Learning mode	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Lock w/ Confirmation	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Unlock w/ Confirmation	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Panic w/ Confirmation	●	●	●	●	●	●	●	●	✗	✗	●	●	⚠	⚠	●
Start w/ Confirmation	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Runtime w/ Confirmation	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Extended runtime w/ Confirmation	●	⚠	⚠	✗	✗	✗	●	●	●	●	●	●	✗	●	●
Stop w/ Confirmation	●	●	●	⚠	●	●	●	●	●	●	●	●	●	●	●
Idle Mode / Pitstop mode	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Trunk Release w/ Confirmation	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Motorized Liftgate Open/Close w/ Confirmation	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
AUX 1 (LSD) w/ Confirmation	●	●	●	✗	●	●	●	●	●	●	●	●	●	●	●
AUX 2 (RSD) w/ Confirmation	●	●	●	✗	●	●	●	●	●	●	●	●	●	●	●
AUX 3	●	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗
AUX 4	●	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗
Remote Starter power cycle (Power Off/On)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Tach Learning sequence	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Diesel Mode support	●	✗	✗	✗	●	●	●	●	●	●	●	●	●	●	●
RS SHUTDOWN CONFIRMATIONS															
Brake Shutdown	●	⚠	⚠	●	●	●	●	●	●	●	●	●	●	●	●
Engine Over Rev Shutdown	●	●	●	●	✗	✗	●	●	●	●	●	●	✗	✗	●
Hood Open Shutdown	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Normal Takeover Procedure Shutdown	⚠	⚠	⚠	●	●	●	⚠	●	●	●	●	●	⚠	●	●
End of Runtime	●	●	●	●	●	●	●	●	●	●	●	●	●	⚠	⚠
TRANSMITTER CONFIGURATIONS															
Start Button 1 Sec Press	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Start Button 2x Press	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Start Button 3 Sec Press	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Transmitter Version #	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Transmitter Date code	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Manual Transmitter Pairing procedure	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
STATUS															
Engine Remaining Runtime (F 3sec)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Battery Status	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
2nd Car Operation	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Valet Mode by Transmitter w/ Confirmation (Key On +L&U)	●	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗
Cold Weather Mode (Lock + Start 1 Sec) (RS Activation Req)	●	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗
LED Blink when system is Locked and Armed	●	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	✗	●	●	✗